

# Straviwood ModuBreak

## Installation Manual

### Installation Tools and Components

- Ink marker
- Pocket tape measure
- Clean cloth
- Personal protective equipment (PPE)

## 1 / Supporting Floor & System Components

Ensure the CLT-modules are physically sound, clean and dry prior to installation.

Mark where the Straviwood ModuBreak bearings will be installed.

## 2 / Install Straviwood ModuBreak Bearings


Apply a thin layer of glue and place the Straviwood ModuBreak bearings on top. Press firmly in order to reduce the thickness of the glue to a minimum. Remove any excess glue coming out from under the pads with a clean cloth.

### Recommended Glue

- Rectavit S40 Flex MS Polymer
- Rectavit 1128 EPDM Spray
- Rectavit 1129 Fat Forward
- Rectavit G60 Pro Heavy Duty

## 3 / Install The Second Module

Once the Straviwood ModuBreak bearings are installed and the glue has set, the second CLT-module can be placed on top of the Straviwood ModuBreak bearings. Be careful not to damage the bearings while installing the second module.

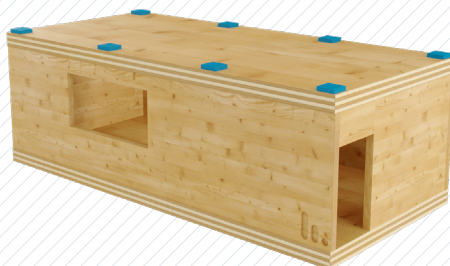

## DISCLAIMER

This information is accurate to the best of our knowledge at the time of issue. Information, data and recommendations provided are based on industry accepted testing and prior product usage. It is intended as descriptive of the general capabilities and performance of our products and does not endorse applicability for any particular project. We reserve the right to change products, performance, and data without notice. This document replaces all information supplied prior to the publication hereof.