

# Straviwood WallBracket

## Installation Manual

### Installation Tools and Components

- Ink marker
- Pocket tape measure
- Screwdriver
- Personal protective equipment (PPE)

## 1 / Supporting Wall/Floor & System Components

Ensure the CLT wall and floor are physically sound, clean and dry prior to installation. The wall and floor should form a straight 90° angle.



Ensure a Straviwood WallBreak-P or Straviwood WallBreak-S solution is installed to decouple the floor and wall.

## 2 / Fix The Straviwood WallBracket Isolators (Elastomer Side)



After marking the positions, install the Straviwood WallBracket isolators with the elastomer side against the wall (Setup A) or against the slab (Setup B). Secure them into place with screws. Always fix the side with the rubber isolator first. Screw until the metal part touches the CLT to achieve optimal performance.

### Recommended Screws

- HECO-TOPIX-PLUS 10x100, flange head screws

## 3 / Fix The Straviwood WallBracket Isolators (Metal Side)

After fixing the elastomer side of the Straviwood WallBracket, the metal side of the bracket should be fixed to the CLT construction. Take care not to overtighten the screws.

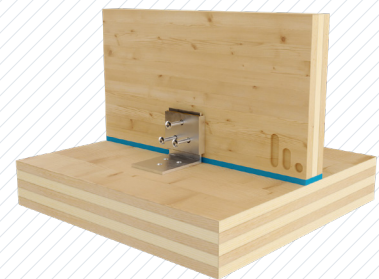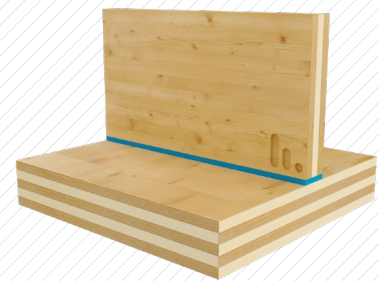

## DISCLAIMER

This information is accurate to the best of our knowledge at the time of issue. Information, data and recommendations provided are based on industry accepted testing and prior product usage. It is intended as descriptive of the general capabilities and performance of our products and does not endorse applicability for any particular project. We reserve the right to change products, performance, and data without notice. This document replaces all information supplied prior to the publication hereof.